

The World's Finest Triggers®


TRIGGER INSTALLATION INSTRUCTIONS


Thank you for purchasing this Timney Trigger. It has been designed and manufactured to provide you with a lifetime of dependable service. Each trigger is hand tested and calibrated on a rifle action before leaving our factory. Please read these instructions **fully** before you begin installing the trigger; you'll be glad you did.

Installation Instructions

- 1. Before beginning work on any firearm, remove the ammunition source and double check to ensure the chamber is empty.
- 2. Installing the Timney trigger on a Browning X-Bolt is quick and simple. You'll need the following tools; a hammer, 1/16"punch, and a 3/32" hex driver.
- Start by removing the bolt from the action and then the action from the stock. Using the 1/16" punch and hammer, drive out the trigger housing pins from left to right (towards the safety).
- 4. Once the factory trigger is removed from the action, pull the safety connecting bar out of the button first and then rotate the safety bar until safety bar ears align with holes in safety plate and remove the safety bar and safety button.
- 5. To install the safety bar onto the Timney Trigger line the ears of the safety bar with the slots on the safety plate and gently press the safety bar through the slot. Rotate the safety bar to align with safety button and insert arm into safety button hole.
- 6. With the safety bar and safety button installed on the Timney Trigger it is now ready to be installed. Slide the Timney trigger housing into the action and align the pin holes. Using the 1/16" punch tap the pins through the action and trigger housing. Be sure to tap the pins into place pushing from right to left or towards the safety.
- 7. To install the stock you will need line up the pin holes and use the Allen wrench to hand tighten the screws in place.
- 8. Pull Weight is adjustable from 1.5 to 4lbs. To adjust the weight of pull turn the screw counter clockwise to lower the pull weight, turn the screw clockwise to increase the pull weight. Do not lower the pull weight to less than 1.5 pounds as this can produce slam firing or 'following'.

As a General rule one full rotation equals one full pound. The trigger will arrive set at 3lbs. from the factory unless you specify a special pull weight by ordering your trigger directly from Timney.

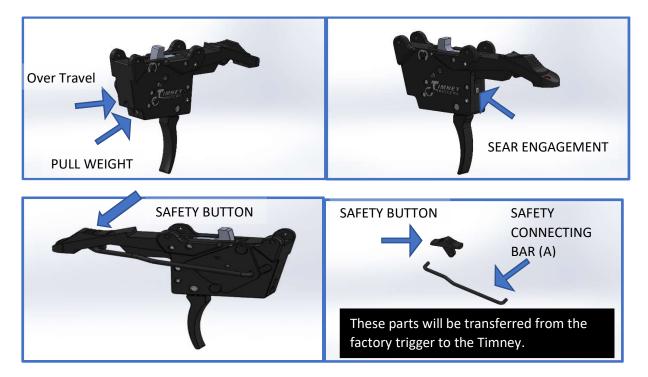



TIMNEY TRIGGER GUARANTEE

Material and workmanship: This Timney trigger has been carefully inspected, tested and adjusted to give a lifetime of dependable service. Every possible care has been exercised in its design and construction. If any defect in workmanship or material should develop under conditions of normal use and service, any necessary repairs, including parts and labor will be made at NO CHARGE to the purchaser providing that our inspection reveals parts were not damaged through accident, alteration, misuse, abuse or other causes beyond our control. We neither assume nor imply any oral or statutory warranties, and we neither assume nor authorize any person to assume for us any obligation or liability in connection with this trigger. Repairs or disassembly of this trigger in any manner without specific authorization, voids the guarantee.